

























SOFTCOOKER Y09

	REF	ART	COD
	02	FRAME _ SOFTCOOKER Y09	GM2486450
	04	MOTOR SOFT COOKER Y09	GM5036100
	06	HEATING ELEMENT 2000W_SOFTCOOKER 09	GM5256600
	08	PCB SOFT COOKER Y09	GM5946300
	10	CONTROL BOARD + CORD SOFTCOOKER	GM5946350
	12	SAFETY PROBE 10K FOR SOFTCOOKER 09	GM5826150
	14	THERMOSTAT PROBE FOR SOFTCOOKER 09	GM5826100
	16	METAL WIRES PROTECTION, SOFT COOKER	GM3047100
	18	S/STEEL HANDLE _ SOFTCOOKER Y09	GM2486040
	20	SPOKED IMPELLER SOFTCOOKER 09	GM5036870
	25	CLAMP _ SOFTCOOKER	GM2492000
	26	PC BOARD SUPPORT _ SOFTCOOKER Y09	GM2486405
	28	CABLE 3X1,5 SCHUKO-SOFTCOOKER Y09	GM5506300
	30	FACEPLATE - SOFTCOOKER Y09	GM8156700
	32	MOTOR FAN _ SOFTCOOKER Y09	GM5036850
	34	FUSE HOLDER 15A 250V_SOFTCOOKER 09	GM5846050
	36	FUSE 6,3X32 16A _ SOFTCOOKER Y09	GM5846055
	38	SCHALTER FUER AUFSCH.	19410102
	40	LOWER FAN, SOFT COOKER	GM5036875
	42	WATER LEVEL SENSOR	GM2210200
	46	WIRING _ SOFTCOOKER Y09	GM5556475
	48	STRAIN RELIEF PA107	GM5893030
	50	SPACER DCK R 4280 _ SOFTCOOKER Y09	GM4696255
	52	SPACER DCK R 52100 _ SOFTCOOKER Y09	GM4696275